

# SILENT *Piano*™ VSH3UP

## COMPATIBILITY



| MODEL NAME ON FRAME | PRODUCTION STARTED | PRODUCTION ENDED | SWITCH BOX* | VSH3    |
|---------------------|--------------------|------------------|-------------|---------|
| B1-SD               | 2006               | 2012             | ④           | VSH3-10 |
| B2-SD               | 2006               | 2012             | ④           | VSH3-10 |
| B3-SD               | 2007               | 2012             | ④           | VSH3-10 |
| B1-SILENT           | 2006               | 2012             | ④           | VSH3-10 |
| B2-SILENT           | 2006               | 2012             | ④           | VSH3-10 |
| B3-SILENT           | 2007               | 2012             | ④           | VSH3-10 |
| P116-SG             | 2009               | 2012             | ③           | VSH3-10 |
| P121-SG             | 2009               | 2012             | ③           | VSH3-10 |
| P116-SILENT         | 2009               | 2012             | ③           | VSH3-10 |
| P121-SILENT         | 2009               | 2012             | ③           | VSH3-10 |
| SU7-SG              | 2007               | 2012             | ③           | VSH3-20 |
| U1-SG               | 2007               | 2012             | ③           | VSH3-10 |
| YUS1-SG             | 2006               | 2012             | ③           | VSH3-10 |
| YUS3-SG             | 2006               | 2012             | ③           | VSH3-20 |
| YUS5-SG             | 2006               | 2012             | ③           | VSH3-20 |
| U3-SG               | 2007               | 2013             | ③           | VSH3-20 |
| U1-SH               | 2013               | 2017             | ⑤           | VSH3-10 |
| B1-SG2              | 2012               | 2018             | ③           | VSH3-10 |
| B2-SG2              | 2012               | 2018             | ③           | VSH3-10 |
| B3-SG2              | 2012               | 2018             | ③           | VSH3-10 |
| P116-SH             | 2012               | 2018             | ⑤           | VSH3-10 |
| P121H-SH            | 2012               | 2018             | ⑤           | VSH3-10 |
| P121-SH             | 2012               | 2018             | ⑤           | VSH3-10 |
| P124-SH             | 2014               | 2018             | ⑤           | VSH3-10 |
| SE122-SH            | 2013               | 2018             | ⑤           | VSH3-10 |
| SE132-SH            | 2013               | 2018             | ⑤           | VSH3-20 |
| SU7-SH              | 2013               | 2018             | ⑤           | VSH3-20 |
| U3-SH               | 2013               | 2018             | ⑤           | VSH3-20 |
| YUS1-SH             | 2013               | 2018             | ⑤           | VSH3-10 |
| YUS3-SH             | 2013               | 2018             | ⑤           | VSH3-20 |
| YUS5-SH             | 2013               | 2018             | ⑤           | VSH3-20 |



| MODEL NAME ON FRAME | PRODUCTION STARTED | PRODUCTION ENDED | SWITCH BOX* | VSH3    |
|---------------------|--------------------|------------------|-------------|---------|
| B1-SC2              | 2018               | 2021             | ⑦           | VSH3-10 |
| B2E-SC2             | 2018               | 2021             | ⑦           | VSH3-10 |
| B3E-SC2             | 2018               | 2021             | ⑦           | VSH3-10 |
| P116-SH2            | 2018               | 2021             | ⑥           | VSH3-10 |
| P121H-SH2           | 2018               | 2021             | ⑥           | VSH3-10 |
| P121-SH2            | 2018               | 2021             | ⑥           | VSH3-10 |
| P124-SH2            | 2018               | 2021             | ⑥           | VSH3-10 |
| SE122-SH2           | 2018               | 2021             | ⑥           | VSH3-10 |
| SE132-SH2           | 2018               | 2021             | ⑥           | VSH3-20 |
| SU7-SH2             | 2019               | 2021             | ⑥           | VSH3-20 |
| U1-SH2              | 2018               | 2021             | ⑥           | VSH3-10 |
| U3-SH2              | 2018               | 2021             | ⑥           | VSH3-20 |
| YUS1-SH2            | 2018               | 2021             | ⑥           | VSH3-10 |
| YUS3-SH2            | 2018               | 2021             | ⑥           | VSH3-20 |
| YUS5-SH2            | 2018               | 2021             | ⑥           | VSH3-20 |

\* To identify your switch box/model, see the PDF "Switch Box Compatibility".

# SILENT *Piano*™ VSH3GP

## COMPATIBILITY



 
 


 
 
 
 
 
| MODEL NAME ON FRAME | PRODUCTION STARTED | PRODUCTION ENDED | SWITCH BOX* | VSH3   |
|---------------------|--------------------|------------------|-------------|--------|
| A1L-SN              | 1998               | 2007             | ②           | VSH3-3 |
| C1L-SN              | 1998               | 2007             | ②           | VSH3-3 |
| C2L-SN              | 1998               | 2007             | ②           | VSH3-3 |
| C3L-SN              | 1998               | 2007             | ②           | VSH3-3 |
| C5L-SN              | 1998               | 2007             | ②           | VSH3-3 |
| C6L-SN              | 1998               | 2007             | ②           | VSH3-3 |
| C7L-SN              | 1998               | 2007             | ②           | VSH3-3 |
| GC1-SN              | 2003               | 2007             | ②           | VSH3-3 |
| C1-SN               | 2006               | 2010             | ②           | VSH3-3 |
| C2-SN               | 2006               | 2010             | ②           | VSH3-3 |
| C3-SN               | 2006               | 2010             | ②           | VSH3-3 |
| C5-SN               | 2006               | 2010             | ②           | VSH3-3 |
| C6-SN               | 2006               | 2010             | ②           | VSH3-3 |
| C7-SN               | 2006               | 2010             | ②           | VSH3-3 |
| A1L-SG              | 2010               | 2011             | ③           | VSH3-2 |
| C2-SG               | 2010               | 2012             | ③           | VSH3-2 |
| C3-SG               | 2010               | 2012             | ③           | VSH3-2 |
| C5-SG               | 2010               | 2012             | ③           | VSH3-2 |
| C6-SG               | 2010               | 2012             | ③           | VSH3-2 |
| C7-SG               | 2010               | 2012             | ③           | VSH3-2 |
| GB1K-SD             | 2010               | 2012             | ④           | VSH3-2 |
| C1-SG               | 2010               | 2013             | ③           | VSH3-2 |
| GC1-SG              | 2010               | 2013             | ③           | VSH3-2 |
| C3XA-SG             | 2010               | 2013             | ③           | VSH3-2 |
| C1X-SH              | 2012               | 2018             | ⑤           | VSH3-1 |
| GC1SH               | 2012               | 2018             | ⑤           | VSH3-1 |
| C2X-SH              | 2013               | 2018             | ⑤           | VSH3-1 |
| C3X-SH              | 2013               | 2018             | ⑤           | VSH3-1 |
| C5X-SH              | 2013               | 2018             | ⑤           | VSH3-1 |
| C6X-SH              | 2013               | 2018             | ⑤           | VSH3-1 |
| C7X-SH              | 2013               | 2018             | ⑤           | VSH3-1 |



| MODEL NAME ON FRAME | PRODUCTION STARTED | PRODUCTION ENDED | SWITCH BOX* | VSH3   |
|---------------------|--------------------|------------------|-------------|--------|
| GB1K-SG2            | 2013               | 2018             | ③           | VSH3-2 |
| C1X-SH2             | 2018               | 2021             | ⑥           | VSH3-1 |
| C2X-SH2             | 2018               | 2021             | ⑥           | VSH3-1 |
| C3X-SH2             | 2018               | 2021             | ⑥           | VSH3-1 |
| C5X-SH2             | 2018               | 2021             | ⑥           | VSH3-1 |
| C6X-SH2             | 2018               | 2021             | ⑥           | VSH3-1 |
| C7X-SH2             | 2018               | 2021             | ⑥           | VSH3-1 |
| GB1K-SC2            | 2018               | 2021             | ⑦           | VSH3-2 |
| GC1-SH2             | 2018               | 2021             | ⑥           | VSH3-1 |

# SWITCH BOX COMPATIBILITY


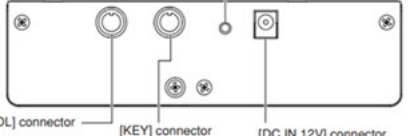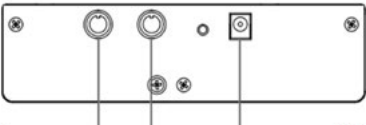
| SWITCH BOX NUMBER | FUNCTIONS & CONNECTIONS  |
|-------------------|--|
| ①                 | <p><b>Switch Box (Front)</b></p>  <p><b>Switch Box (Rear)</b></p>   |
| ②                 | <p><b>• Front View</b></p>  <p>POWER switch      VOLUME control      Two HEADPHONES sockets      REVERB control</p> <p><b>• Left Side View</b></p>  <p>PITCH control</p> <p><b>• Rear View</b></p>  <p>AUX IN/OUT jacks      MIDI IN/OUT jacks</p> |
| ③                 | <p><b>• Front View</b></p>  <p>[POWER] switch      [REC] button      [PLAY/STOP] button      [REVERB] knob      [VOLUME] control      [PHONES] sockets</p> <p><b>• Rear View</b></p>  <p>[PDL] connector      [KEY] connector      [DC IN 12V] connector</p> <p>Switch box self-test switch</p>                                  |
| ④                 | <p><b>• Front View</b></p>  <p>[POWER] switch      [REVERB] control      [VOLUME] control      [PHONES] sockets</p> <p><b>• Rear View</b></p>  <p>[PDL] connector      [KEY] connector      [DC IN 12V] connector</p>  |



## SWITCH BOX NUMBER

## FUNCTIONS & CONNECTIONS

 
⑤

### • Front View



- |  |                               |
|--|-------------------------------|
| 1 POWER Button   | 7 FUNC. Button                |
| 2 QUIET Button (Grand Piano)<br>PIANO Button (Upright Piano) | 8 Function Indicator          |
| 3 REC Button   | 9 Display                     |
| 4 STOP Button  | 10 USB Terminal               |
| 5 PLAY/PAUSE Button  | 11 PHONES Jacks (Stereo Mini) |
| 6 -/NO, +/YES Button   | 12 VOLUME Control             |


### • Bottom View

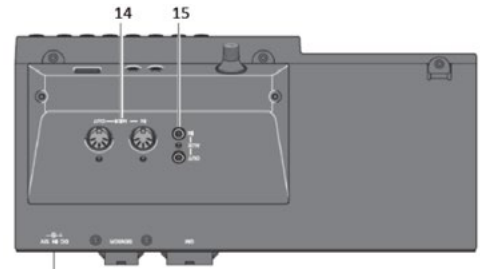


- |    |                                  |
|----|----------------------------------|
| 13 | 13 DC IN 12V Connector           |
|    | 14 MIDI IN/MIDI OUT Connectors   |
|    | 15 AUX IN/AUX OUT Jacks (Stereo) |

⑥

### • Front View

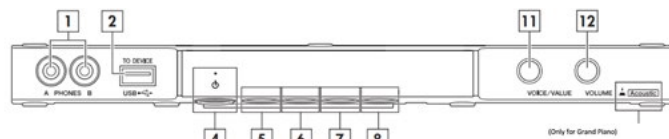 

### • Bottom View

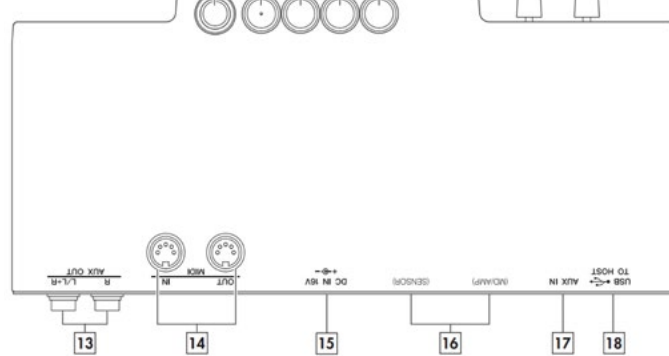 

⑦

### • Front View



### • Bottom View

